OMA LwM2M v1.0 - Test Results - Virtual SVE-40, 15-21 Nov 2023

Client v1.0 Teams: 2 Client implementations

Server v1.0 Teams: Cumulocity

Pass Fail Inconclusive Note Applicable Pass Fail Inconclusive Note Applicable Pass Pass	Server VI.0 reams. Cumulocity		1				
LightweighMZM-1.0-in-10 - Client Initiated Bootstrap Full (PSK)	OMA-ETS-LightweightM2M-V1 0 2-20180815-A.zip	Pass	Fail	Inconclusive		Out of Time	Totals
LightweightMZM-1.0-in-1 - Client Initiated Bootstrap Full (PGR) FULL (PGR) FALURE IS NOT RELATED TO THE SERVER. 0	Bootstrap Interface: [0-99]						
LightweightM2M-1-0-in-13 - Simple Bootstrap Full (Cert) - FAURE IS NOT RELATED TO THE SERVER. 0	LightweightM2M-1.0-int-0 – Client Initiated Bootstrap	1	0	0	1	0	2
LightweightM2M-1.0-int-3 - Simple Bootstrap from Smartcard	LightweightM2M-1.0-int-1 – Client Initiated Bootstrap Full (PSK)	1	0	0	1	0	2
Registration Interface [100-199]	LightweightM2M-1.0-int-2 — Client Initiated Bootstrap Full (Cert) - FAILURE IS NOT RELATED TO THE SERVER.	0	1*	0	1	0	2
LightweightM2M-1-0-int-101 - Initial Registration 2	LightweightM2M-1.0-int-3 – Simple Bootstrap from Smartcard	0	0	0	2	0	2
LightweightM2M-1.0-int-102 - Registration Update	Registration Interface [100-199]						
LightweightM2M-1.0-int-103 = Deregistration 1	LightweightM2M-1.0-int-101 – Initial Registration	2	0	0	0	0	2
LightweightMZM-1.0-int-104 - Registration Update Trigger 2	LightweightM2M-1.0-int-102 – Registration Update	2	0	0	0	0	2
Device management & Service Enablement Interface [200-299]	LightweightM2M-1.0-int-103 – Deregistration	1	0	0	1	0	2
LightweightMZM-1.0-int-201 - Querying basic information in Plain Text format	LightweightM2M-1.0-int-104 – Registration Update Trigger	2	0	0	0	0	2
LightweightMZM-1.0-int-203 — Querying basic information in TLV format 1	Device management & Service Enablement Interface [200-299]						
LightweightMZM-1.0-int-204 - Querying basic information in JSON format 2 0 0 0 1 0 2	LightweightM2M-1.0-int-201 – Querying basic information in Plain Text format	2	0	0	0	0	2
LightweightM2M-1.0-int-205	LightweightM2M-1.0-int-203 – Querying basic information in TLV format	2	0	0	0	0	2
LightweightM2M-1.0-int-215 — Setting basic information in TLV format - FAILURE IS NOT RELATED TO THE SERVER. 1 1 0 0 0 1 0 0 2 LightweightM2M-1.0-int-220 — Setting basic information in JSON format 1 0 0 0 1 0 0 2 LightweightM2M-1.0-int-241 — Executable Resource: Rebooting the device 2 0 0 0 0 0 0 0 2 LightweightM2M-1.0-int-260 — Discover Command 1 0 0 0 1 0 2 LightweightM2M-1.0-int-260 — Discover Command 1 0 0 0 1 0 2 LightweightM2M-1.0-int-260 — Discover Command 2 0 0 0 0 0 0 1 0 2 LightweightM2M-1.0-int-301 — Observation and Notification of parameter values 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-302 — Cancel Observations using Reset Operation 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-303 — Cancel Observations using Observe with Cancel parameter 2 0 0 0 0 0 0 2 Security [400-499] LightweightM2M-1.0-int-401 — UDP Channel Security — Pre-shared Key Mode 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-401 — UDP Channel Security — Certified Mode — FAILURE IS NOT RELATED TO THE SERVER. LightweightM2M-1.0-int-403 — UDP Channel Security — Certified Mode (Server Identify Verification Failure) FAILURE IS NOT RELATED TO THE SERVER. LightweightM2M-1.0-int-651 — Check Access to the Resources 2 0 0 0 0 0 2 LightweightM2M-1.0-int-652 — Querying the firmware version from the client 2 0 0 0 0 0 2 LightweightM2M-1.0-int-652 — Ouerying the firmware version from the client 2 0 0 0 0 0 2 LightweightM2M-1.0-int-685 — Delete Object Instance 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-685 — Delete Object Instance 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-685 — Delete Object Instance 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-685 — Delete Object Instance 3 0 0 0 0 0 0 2 LightweightM2M-1.0-int-685 — Delete Object Instance 3 0 0 0 0 0 0 2 LightweightM2M-1.0-int-70 — Basic Observation and notification on Connectivity Monitoring Object Resource 5 Interval Delete Object (ID 5) [750-799]		1	0	0	1	0	2
LightweightM2M-1.0-int-220 – Setting basic information in JSON format 1 0 0 0 1 0 2 LightweightM2M-1.0-int-241 – Executable Resource: Rebooting the device 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-260 – Discover Command 1 0 0 0 1 0 2 Information Reporting Interface [300-399] LightweightM2M-1.0-int-301 – Observation and Notification of parameter values 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-302 – Cancel Observations using Reset Operation 2 0 0 0 0 0 0 0 2 LightweightM2M-1.0-int-303 – Cancel Observations using Reset Operation 2 0 0 0 0 0 0 0 2 Security [400-499] LightweightM2M-1.0-int-401 – UDP Channel Security – Pre-shared Key Mode 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-402 – UDP Channel Security – Certified Mode - FAILURE IS NOT RELATED TO THE SERVER. LightweightM2M-1.0-int-403 – UDP Channel Security – Certified Mode (Server Identify Verification Failure) FAILURE IS NOT RELATED TO THE SERVER. LightweightM2M-1.0-int-651 – Check Access to the Resources 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-652 – Querying the firmware version from the client 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-655 – Delete Object Instance 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-656 – Delete Object Instance 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-685 – Delete Object Instance 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-686 – Delete Object Instance 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-686 – Delete Object Instance 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-686 – Delete Object Instance 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-686 – Delete Object Instance 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-686 – Delete Object Instance 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-686 – Delete Object Instance 2 0 0 0 0 0 0 2 LightweightM2M-1.0-int-710 – Querying the readable resources of object 1 0 1 0 0 2 LightweightM2M-1.0-int-710 – Sasic Observation and notification on Connectivity Monitoring Object Resource 1 0 1 0 0 2 Firmware Update Object (ID 5) [750-799]	LightweightM2M-1.0-int-205 – Setting basic information in Plain Text format	2	0	0	0	0	2
LightweighttM2M-1.0-int-241 = Executable Resource: Rebooting the device 2 0 0 0 0 0 2 2 LightweighttM2M-1.0-int-260 - Discover Command 1 0 0 0 1 0 0 2 2 1 0 0 0 0 1 0 0 2 2 1 0 0 0 0	LightweightM2M-1.0-int-215 – Setting basic information in TLV format - FAILURE IS NOT RELATED TO THE SERVER.	1	1*	0	0	0	2
LightweightM2M-1.0-int-241 – Executable Resource: Rebooting the device 2 0 0 0 0 0 0 2 2 LightweightM2M-1.0-int-260 – Discover Command 1 0 0 0 1 0 0 2 2 1 0 0 0 0 1 0 0 2 2 1 0 0 0 0	· · ·	1	0	0	1	0	2
Information Reporting Interface 300-399		2	0	0	0	0	2
LightweightM2M-1.0-int-301 - Observation and Notification of parameter values 2 0 0 0 0 2 LightweightM2M-1.0-int-302 - Cancel Observations using Reset Operation 2 0 0 0 0 0 2 LightweightM2M-1.0-int-303 - Cancel Observations using Observe with Cancel parameter 2 0 0 0 0 0 2 Security [400-499] LightweightM2M-1.0-int-401 - UDP Channel Security - Pre-shared Key Mode 2 0 0 0 0 0 2 LightweightM2M-1.0-int-402 - UDP Channel Security - Certified Mode (Server Identify Verification Failure) FAILURE IS NOT RELATED TO THE SERVER. 0 1* 0 1 0 2 LightweightM2M-1.0-int-403 - UDP Channel Security - Certified Mode (Server Identify Verification Failure) FAILURE IS NOT RELATED TO THE SERVER. 0 1* 0 1 0 2 LightweightM2M-1.0-int-605 - Check Access to the Resources 2 0 0 0 0 2 LightweightM2M-1.0-int-665 - Check Access to the Resources 2 0 0 0 0 2 LightweightM2M-1.0-int-665 - Check Access to the Resources 2 0 0	LightweightM2M-1.0-int-260 – Discover Command	1	0	0	1	0	2
LightweightM2M-1.0-int-301 - Observation and Notification of parameter values 2 0 0 0 0 2 LightweightM2M-1.0-int-302 - Cancel Observations using Reset Operation 2 0 0 0 0 0 2 LightweightM2M-1.0-int-303 - Cancel Observations using Observe with Cancel parameter 2 0 0 0 0 0 2 Security [400-499] LightweightM2M-1.0-int-401 - UDP Channel Security - Pre-shared Key Mode 2 0 0 0 0 0 2 LightweightM2M-1.0-int-402 - UDP Channel Security - Certified Mode (Server Identify Verification Failure) FAILURE IS NOT RELATED TO THE SERVER. 0 1* 0 1 0 2 LightweightM2M-1.0-int-403 - UDP Channel Security - Certified Mode (Server Identify Verification Failure) FAILURE IS NOT RELATED TO THE SERVER. 0 1* 0 1 0 2 LightweightM2M-1.0-int-605 - Check Access to the Resources 2 0 0 0 0 2 LightweightM2M-1.0-int-665 - Check Access to the Resources 2 0 0 0 0 2 LightweightM2M-1.0-int-665 - Check Access to the Resources 2 0 0	Information Reporting Interface [300-399]						
LightweightM2M-1.0-int-302 - Cancel Observations using Reset Operation 2 0 0 0 0 2 LightweightM2M-1.0-int-303 - Cancel Observations using Observe with Cancel parameter 2 0 0 0 0 2 Security [400-499] LightweightM2M-1.0-int-401 - UDP Channel Security - Pre-shared Key Mode 2 0 0 0 0 2 LightweightM2M-1.0-int-402 - UDP Channel Security - Certified Mode - FAILURE IS NOT RELATED TO THE SERVER. 0 1* 0 1 0 2 LightweightM2M-1.0-int-403 - UDP Channel Security - Certified Mode (Server Identify Verification Failure) FAILURE IS NOT RELATED TO THE SERVER. 0 1* 0 1 0 2 LightweightM2M-1.0-int-403 - UDP Channel Security - Certified Mode (Server Identify Verification Failure) FAILURE IS NOT RELATED TO THE SERVER. 0 1* 0 1 0 2 LightweightM2M-1.0-int-681 - Check Access to the Resources 2 0 0 0 0 2 LightweightM2M-1.0-int-685 - Querying the firmware version from the client 2 0 0 0 0 2 LightweightM2M-1.0-int-685 - Delete Object Instance <td< td=""><td></td><td>2</td><td>0</td><td>0</td><td>0</td><td>0</td><td>2</td></td<>		2	0	0	0	0	2
LightweightM2M-1.0-int-303 - Cancel Observations using Observe with Cancel parameter 2		2	0	0	0	0	2
LightweightM2M-1.0-int-401 - UDP Channel Security - Pre-shared Key Mode 2 0 0 0 0 2 LightweightM2M-1.0-int-402 - UDP Channel Security - Certified Mode (Server Identify Verification Failure) FAILURE IS NOT RELATED TO THE SERVER. 0 1* 0 1 0 2 LightweightM2M-1.0-int-403 - UDP Channel Security - Certified Mode (Server Identify Verification Failure) FAILURE IS NOT RELATED TO THE SERVER. 0 1* 0 1 0 2 LightweightM2M-1.0-int-651 - Check Access to the Resources 2 0 0 0 0 2 LightweightM2M-1.0-int-652 - Querying the firmware version from the client 2 0 0 0 0 2 LightweightM2M-1.0-int-680 - Create Object Instance 2 0 0 0 0 2 LightweightM2M-1.0-int-685 - Delete Object Instance 2 0 0 0 0 2 LightweightM2M-1.0-int-701 - Querying the readable resources of object 1 0 1 0 0 2 LightweightM2M-1.0-int-710 - Basic Observation and notification on Connectivity Monitoring Object Resource 1 0 1 0 0 2		2	0	0	0	0	2
LightweightM2M-1.0-int-402 – UDP Channel Security – Certified Mode (Server Identify Verification Failure) FAILURE IS NOT RELATED TO THE SERVER. LightweightM2M-1.0-int-403 – UDP Channel Security – Certified Mode (Server Identify Verification Failure) FAILURE IS NOT RELATED TO THE SERVER. LightweightM2M-1.0-int-651 – Check Access to the Resources LightweightM2M-1.0-int-652 – Querying the firmware version from the client LightweightM2M-1.0-int-680 – Create Object Instance LightweightM2M-1.0-int-685 – Delete Object Instance LightweightM2M-1.0-int-685 – Delete Object Instance LightweightM2M-1.0-int-701 – Querying the readable resources of object LightweightM2M-1.0-int-710 – Basic Observation and notification on Connectivity Monitoring Object Resource Firmware Update Object (ID 5) [750-799]	Security [400-499]						
LightweightM2M-1.0-int-402 – UDP Channel Security – Certified Mode (Server Identify Verification Failure) FAILURE IS NOT RELATED TO THE SERVER. LightweightM2M-1.0-int-403 – UDP Channel Security – Certified Mode (Server Identify Verification Failure) FAILURE IS NOT RELATED TO THE SERVER. LightweightM2M-1.0-int-651 – Check Access to the Resources LightweightM2M-1.0-int-652 – Querying the firmware version from the client LightweightM2M-1.0-int-680 – Create Object Instance LightweightM2M-1.0-int-685 – Delete Object Instance LightweightM2M-1.0-int-685 – Delete Object Instance LightweightM2M-1.0-int-701 – Querying the readable resources of object LightweightM2M-1.0-int-710 – Basic Observation and notification on Connectivity Monitoring Object Resource Firmware Update Object (ID 5) [750-799]	LightweightM2M-1.0-int-401 – UDP Channel Security – Pre-shared Key Mode	2	0	0	0	0	2
LightweightM2M-1.0-int-403 – UDP Channel Security – Certified Mode (Server Identify Verification Failure) FAILURE IS NOT RELATED TO THE SERVER. 1		0	1*	0	1	0	2
LightweightM2M-1.0-int-651 - Check Access to the Resources 2 0 0 0 0 2 LightweightM2M-1.0-int-652 - Querying the firmware version from the client 2 0 0 0 0 2 LightweightM2M-1.0-int-680 - Create Object Instance 2 0 0 0 0 0 2 LightweightM2M-1.0-int-685 - Delete Object Instance 2 0 0 0 0 2 LightW2M Connectivity Monitoring (ID:4) [700-749]. LightweightM2M-1.0-int-701 - Querying the readable resources of object 1 0 1 0 0 2 LightweightM2M-1.0-int-710 - Basic Observation and notification on Connectivity Monitoring Object Resource 1 0 1 0 0 2 Firmware Update Object (ID 5) [750-799] Firmware Update Object (ID 5) [750-799]	LightweightM2M-1.0-int-403 – UDP Channel Security – Certified Mode (Server Identify Verification Failure)	0	1*	0	1	0	2
LightweightM2M-1.0-int-651 - Check Access to the Resources 2 0 0 0 0 2 LightweightM2M-1.0-int-652 - Querying the firmware version from the client 2 0 0 0 0 2 LightweightM2M-1.0-int-680 - Create Object Instance 2 0 0 0 0 0 2 LightweightM2M-1.0-int-685 - Delete Object Instance 2 0 0 0 0 2 LightW2M Connectivity Monitoring (ID:4) [700-749]. LightweightM2M-1.0-int-701 - Querying the readable resources of object 1 0 1 0 0 2 LightweightM2M-1.0-int-710 - Basic Observation and notification on Connectivity Monitoring Object Resource 1 0 1 0 0 2 Firmware Update Object (ID 5) [750-799] Firmware Update Object (ID 5) [750-799]	LwM2M Device Object (ID 3) [650-699]						
LightweightM2M-1.0-int-652 — Querying the firmware version from the client LightweightM2M-1.0-int-680 — Create Object Instance LightweightM2M-1.0-int-685 — Delete Object Instance LightweightM2M-1.0-int-685 — Delete Object Instance LightweightM2M-1.0-int-685 — Delete Object Instance LightweightM2M-1.0-int-701 — Querying the readable resources of object LightweightM2M-1.0-int-701 — Basic Observation and notification on Connectivity Monitoring Object Resource Firmware Update Object (ID 5) [750-799]		2	0	0	0	0	2
LightweightM2M-1.0-int-685 – Delete Object Instance 2 0 0 0 0 0 2 LwM2M Connectivity Monitoring (ID:4) [700-749]. LightweightM2M-1.0-int-701 – Querying the readable resources of object LightweightM2M-1.0-int-710 – Basic Observation and notification on Connectivity Monitoring Object Resource 1 0 1 0 0 2 Firmware Update Object (ID 5) [750-799]	LightweightM2M-1.0-int-652 – Querying the firmware version from the client	2	0	0	0	0	2
LightweightM2M-1.0-int-685 – Delete Object Instance 2 0 0 0 0 0 2 LwM2M Connectivity Monitoring (ID:4) [700-749]. LightweightM2M-1.0-int-701 – Querying the readable resources of object LightweightM2M-1.0-int-710 – Basic Observation and notification on Connectivity Monitoring Object Resource 1 0 1 0 0 2 Firmware Update Object (ID 5) [750-799]		2	0	0	0	0	2
LightweightM2M-1.0-int-701 – Querying the readable resources of object LightweightM2M-1.0-int-710 – Basic Observation and notification on Connectivity Monitoring Object Resource 1 0 1 0 0 2 LightweightM2M-1.0-int-710 – Basic Observation and notification on Connectivity Monitoring Object Resource 1 0 1 0 0 2 Firmware Update Object (ID 5) [750-799]	· · ·	2	0	0	0	0	2
LightweightM2M-1.0-int-701 – Querying the readable resources of object LightweightM2M-1.0-int-710 – Basic Observation and notification on Connectivity Monitoring Object Resource 1 0 1 0 0 2 LightweightM2M-1.0-int-710 – Basic Observation and notification on Connectivity Monitoring Object Resource 1 0 1 0 0 2 Firmware Update Object (ID 5) [750-799]	· · · · · · · · · · · · · · · · · · ·						
LightweightM2M-1.0-int-710 – Basic Observation and notification on Connectivity Monitoring Object Resource 1 0 1 0 0 2 Firmware Update Object (ID 5) [750-799]		1	0	1	0	0	2
Firmware Update Object (ID 5) [750-799]		1	0	1	0	0	2
, , , , , , ,							
	LightweightM2M-1.0-int-751 – Querying the readable resources	2	0	0	0	0	2

LightweightM2M-1.0-int-755 – Setting the writable Resource Package	1	0	0	1	0	2
LightweightM2M-1.0-int-756 – Setting the writable Resource Package URI	1	0	0	1	0	2
LightweightM2M-1.0-int-760 –Basic Observation and notification on Firmware Update Object Resources	1	0	0	1	0	2
LightweightM2M-1.0-int-770 – Successful Firmware update (via COAP)	1	0	0	1	0	2
LightweightM2M-1.0-int-771 – Successful Firmware update (via alternative mechanism)	1	0	0	1	0	2
LightweightM2M-1.0-int-772 – Error Case 1: firmware installation without downloaded package	1	0	0	1	0	2
LightweightM2M-1.0-int-773 – Error Case 2: shortage of storage memory	0	0	0	2	0	2
LightweightM2M-1.0-int-774 – Error Case 3: out of memory	0	0	0	2	0	2
LightweightM2M-1.0-int-775 – Error Case 4: Connection lost during download (package URI)	0	0	0	2	0	2
LightweightM2M-1.0-int-776 – Error Case 5: Package Integrity check failure	0	0	0	2	0	2
LightweightM2M-1.0-int-777 – Error Case 5: I ackage integrity check failure	0	0	0	2	0	2
LightweightM2M-1.0-int-778 – Error Case 6: unsupported package type	0	0	0	2	0	2
LightweightM2M-1.0-int-779 – Error Case 8: Unsuccessful Firmware Update	0	0	0	2	0	2
	U	0	U		0	
LwM2M Location Object (ID:6) [800-849]	2	0	0	0	0	2
LightweightM2M-1.0-int-801 – Querying the readable resources of object	2	0	0	0	0	2
LightweightM2M-1.0-int-810 – Basic Observation and notification on Location Object Instance	2	0	U	0	0	
Connectivity Statistics (ID 7) [900-949]	2	0	0	0	0	2
LightweightM2M-1.0-int-901 – Querying a Data Collection from Connectivity Object Instance	2	0	0	0	0	2
LightweightM2M-1.0-int-905 – Setting the writable resources			_	-		
LightweightM2M-1.0-int-910 – Basic Observation and notification on Connectivity Monitoring Object Instance	2	0	0	0	0	2
MULTI-SERVERS CONTEXT [950-999]	4					
LightweightM2M- 1.0 - int-950 - Multi-Servers Registration	1	0	0	1	0	2
LightweightM2M- 1.0 - int-951 - Multi-Servers & Attributes	1	0	0	1	0	2
Cellular Network Connectivity ID:10 [1200-1249]	-		_			_
LightweightM2M-1.0-int-1200 – Querying the readable resources of Object ID:10	1	0	0	1	0	2
LightweightM2M-1.0-int-1201 – Querying the readable resources of Object ID:10 in version 1.1	1	0	0	1	0	2
LightweightM2M-1.0-int-1202 – Setting the Power Saving Mode Resources of Object ID:10 (version 1.1 only)	0	0	0	2	0	2
LightweightM2M-1.0-int-1203 – Observation and notification on Object ID:0 related to Power Saving Mode Re		0	0	2	0	2
LightweightM2M-1.0-int-1204 – Observation and notification on Object ID: 10 related to timers	1	0	0	1	0	2
APN connection profile ID:11 [1250-1299]						
LightweightM2M-CONMGMT - 1.0-int - 1250 - APN Configuration	0	0	0	2	0	2
Bearer Selection ID:13 [1350-1399]						
LightwightM2M-CONMGMT - 1.0-int-1350 - Bearer Selection	0	0	0	2	0	2
Portfolio Object (ID 16) [1600-1699]						
LightweightM2M-1.0-int-1630 – Create Portfolio Object Instance	1	0	0	1	0	2
LightweightM2M-1.0-int-1635 – Delete Portfolio Object Instance	1	0	0	1	0	2
BinaryAppDataContainer Object (ID 19) [1900-1999]						
LightweightM2M-1.0-int-1900 – Observation and notification on Object ID 19	0	0	0	2	0	2
LightweightM2M-1.0-int-1901 – Setting the writable Resource Data	0	0	0	2	0	2
Event Log Object (ID 20) [2000-2099]						
LightweightM2M-1.0-int-2000 – Control the Log Function	0	0	0	2	0	2
1114 114004 4014 0004 0 1 4	0	0	0	2	0	2
LightweightM2M-1.0-int-2001 – Querying the readable resources						
LightweightM2M-1.0-int-2001 – Querying the readable resources FAILURES ARE NOT RELATED TO THE SERVER Totals	64	4*	2	54	0	124

APN test: unable to retrieve resource 10/0/11 with content format specified Bearer Test: not object 12/bad request to create and delete instance portfolio

- object didnt provide with resource 13 14

Not testing full firmware upgrade today.

smnc issue - device reports as string for complete representation of smnc space

incompatible dtls cipher suites

215: device POST tlv parse issue

Explanation of Test Cases Results

PASS: Both teams agree that they Pass – Criteria has been met

FAIL: Both teams agree that they Fail – Criteria has not been met

INCONCLUSIVE: Teams are not in agreement of the Test result

NOT APPLICABLE: Test cannot be performed due to lack of support by either of the implementations

OUT OF TIME: There was not enough time to test the Test Case